



FPI-SERIES HEATED IN-LINE FILTER INSTRUCTION SHEET

P/N FPI-X-2.25/.5-XXX & FPI-X-1/.5-XXX

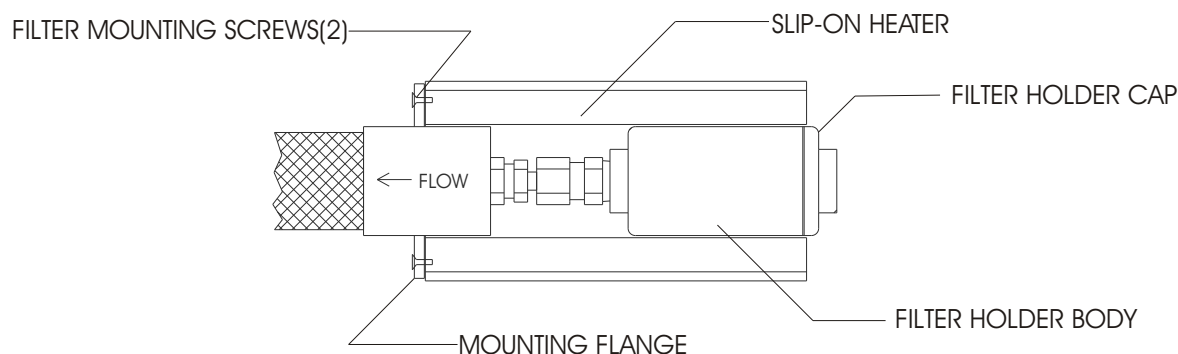


FILTER REPLACEMENT

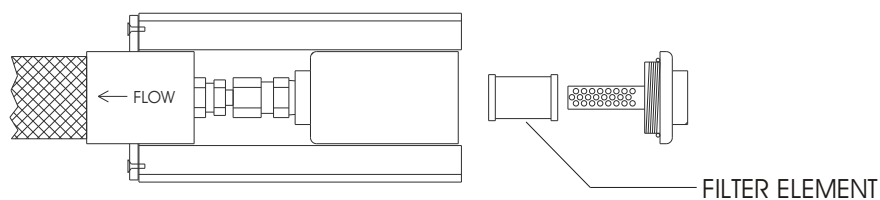

To change the filter element, unscrew the Filter Holder Cap from the Filter holder body. Remove the filter element and replace it with a clean element. Re-tighten the cap. (Use Caution!, filter may be hot!)

REPLACING SAMPLE TUBE ON RE-TUBE HEATED HOSES (OPTIONAL)

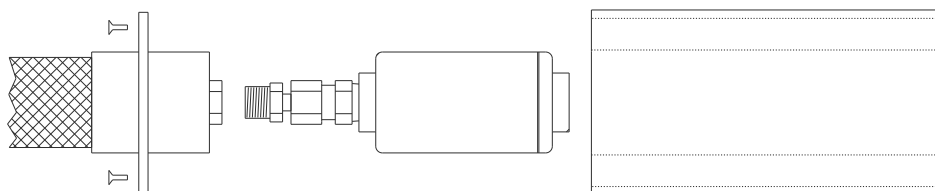

- 1) Remove the two screws from the hose mounting flange.
- 2) Slip off the slip-on heater. (Note On some models, you may need to disconnect an electrical connector.)
- 3) Unscrew the filter assembly from the hose end nut as shown.

- 4) Replace the sample tube following the standard procedure for Atmo-Seal Heated Re-Tube Hoses. If you are unfamiliar with this procedure, see the document titled "Replacement of Sample Tubes in Atmo-Seal Heated Hoses."
- 5) After replacing the tube, reverse steps 1-3.